

# DAIMLER TRUCK

## Selection of actual value group

Display of all actual values

Control unit information

Voltage supply of control unit

Sensor voltages

Temperatures

Pressure values

Engine speeds

Torques

Power take-off

Exhaust gas recirculation

Engine oil

Fuel supply

Starting procedure

Status of actuators

Operating condition

Charge air system

Theft protection - Immobilizer  
(FBS2)

Cylinder - Acceleration values  
( Only for the development  
department )

EOL values

+ Individual actual value groups

# DAIMLER TRUCK

| No.                           |                                                                                   | Name                                                                         | Actual value | Specified value  |
|-------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------|--------------|------------------|
| <input type="checkbox"/> M031 |  | Specified position of component 'Exhaust gas recirculation positioner'       | 42.00%       | [0.00 .. 100.00] |
| <input type="checkbox"/> M050 |                                                                                   | Fault status of component 'Y621 (Exhaust gas recirculation controller)'      | OK           |                  |
| <input type="checkbox"/> M062 |  | Exhaust back pressure upstream of turbocharger                               | 1169mbar     | [0 .. 10000]     |
| <input type="checkbox"/> M066 |  | Exhaust gas recirculation rate                                               | 21.33%       | [0.00 .. 100.10] |
| <input type="checkbox"/> M133 |  | Control deviation of component 'Y621 (Exhaust gas recirculation controller)' | 16.70%       |                  |
| <input type="checkbox"/> R068 |  | B621 (Exhaust gas recirculation (AGR) differential pressure sensor)          | 1.10V        | [0.00 .. 5.00]   |

MB\_LKW/Steuergeraete/Antrieb/MCM/MCM21T/SFTP/MCM21T\_SFTP.gmf#RuntimeTabs/CurrentValues/NODE2/Istwerte