


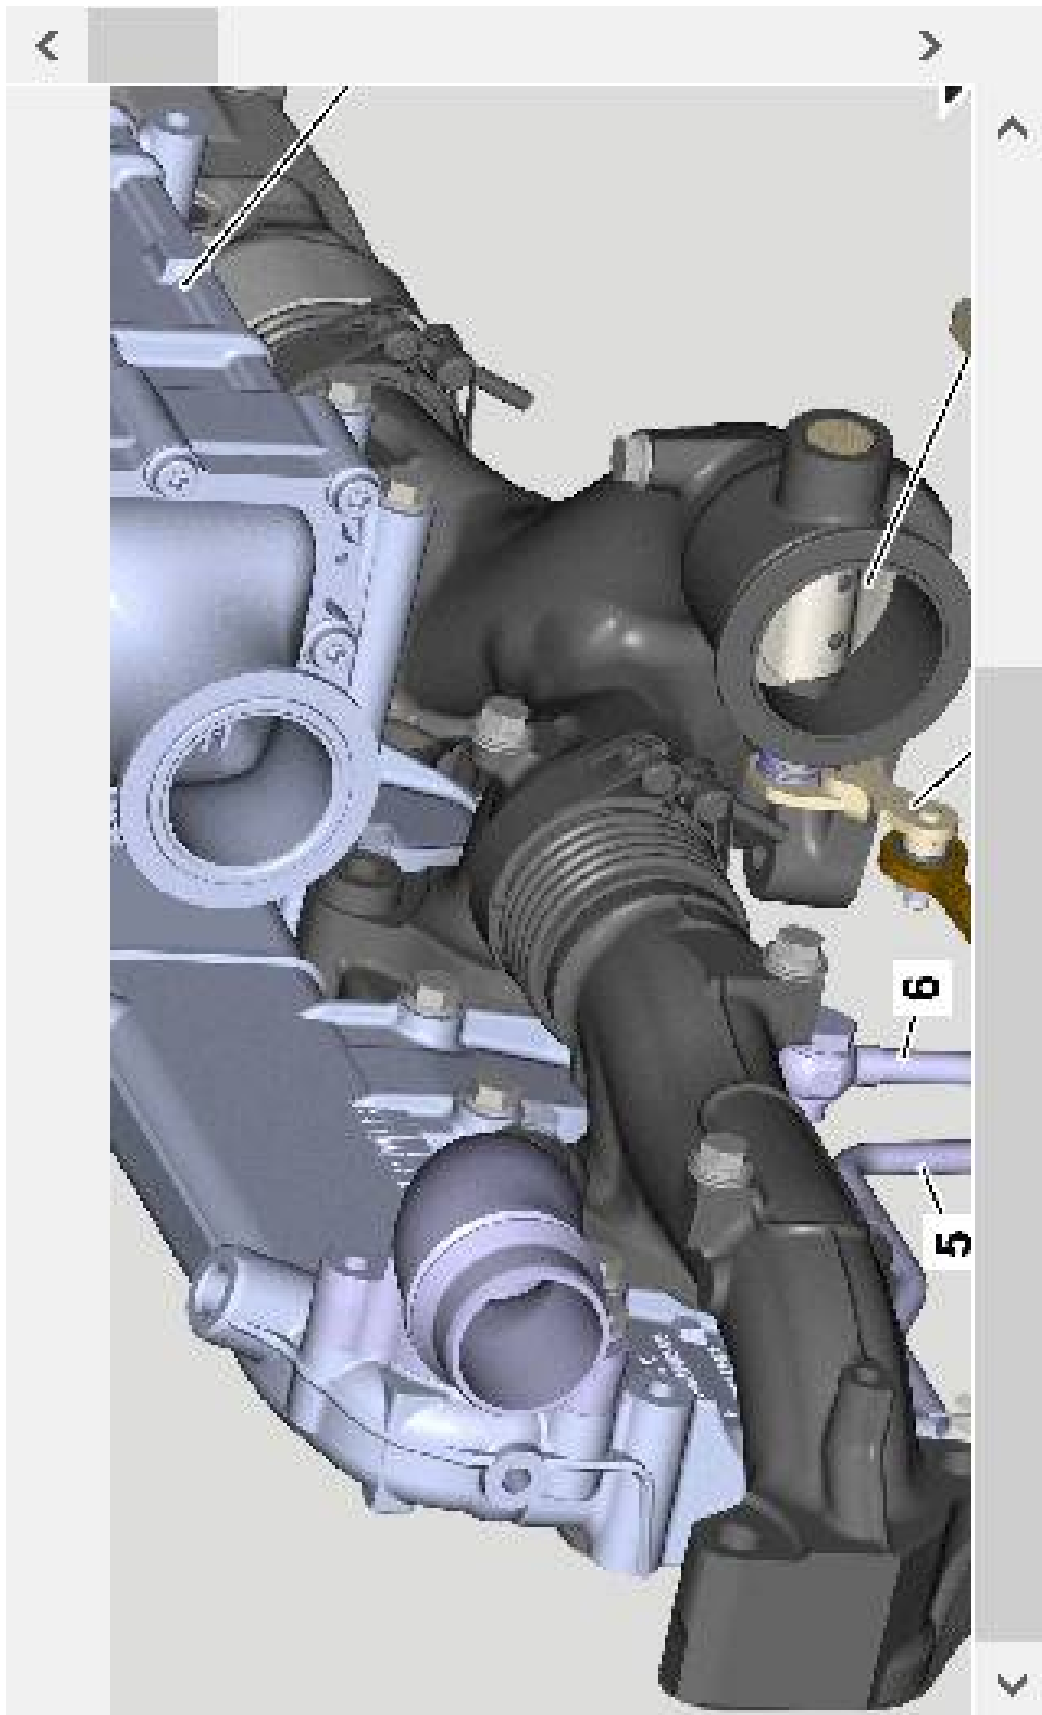

DAIMLER TRUCK

Legend

10: Lever on throttle valve

4: Throttle valve (Exhaust gas recirculation)

5/6: Coolant line (Exhaust gas recirculation positioner)

7: Pull rod (Exhaust gas recirculation positioner)

8: Lever on exhaust gas recirculation positioner

Y621 (Exhaust gas recirculation controller)

Instructions

- 1 Switch off ignition.
- 2 Check correct installation or correct installation position of component 'Pull rod'. Observe labeling on component 'Pull rod'. (S = Exhaust gas recirculation positioner ; V = Throttle valve/Exhaust gas recirculation flap)
- 3 Check threaded connections at positions 10 and 8 for tight seating (the pull rod must not move in the axial direction on the pin).
- 4 Confirm test result.

Test
result

NO SELECTION

