



# DAIMLER TRUCK

## Legend

10: Lever on throttle valve

4: Throttle valve (Exhaust gas recirculation)

5/6: Coolant line (Exhaust gas recirculation positioner)

7: Pull rod (Exhaust gas recirculation positioner)

8: Lever on exhaust gas recirculation positioner

Y621 (Exhaust gas recirculation controller)

## Instruction

- 1 Separate mechanical connection between components 'Pull rod' and 'Y621 (Exhaust gas recirculation controller)'.
- 2 Press component 'Y621 (Exhaust gas recirculation controller)' as far as the stop and release.  
(CLOCKWISE)
- 3 Does the component 'Y621 (Exhaust gas recirculation controller)' automatically return to its original position without jerking? NO = The check was not OK.
- 4 Press component 'Y621 (Exhaust gas recirculation controller)' as far as the stop and release.  
(COUNTERCLOCKWISE)
- 5 Does the component 'Y621 (Exhaust gas recirculation controller)' automatically return to its original position without jerking? NO = The check was not OK.

## Question

Was the check OK?